



TENT WALL

MANUAL

These instructions are compatible with Tent Wall for all Vuly trampoline models.

ATTENTION!

SAFETY INFORMATION, INSTALLATION, CARE AND MAINTENANCE INSTRUCTIONS.
READ PRIOR TO ASSEMBLING AND USING THE PRODUCT.

Vuly cares about safety.
Adult supervision is required at all times whilst equipment is in use.



Visit www.vulyplay.us/install
for step by step video instructions, or scan this QR code
If you have any feedback regarding our instructions, feel free to
email instructions@vulyplay.com so that we can continue to improve.

DISCLAIMER

The following Conditions of Sale will apply to, and bind the purchaser of, any Vuly USA Operations Corp (3666901) product.

NOTICE TO USER:

Please read this agreement carefully before purchase or assembly. By purchasing, opening and assembling this product you acknowledge that you have read this agreement, understand it and agree to be bound by its conditions. If you are making a purchase on behalf of another person, you agree that you are making the purchase as their agent.

LEGAL RIGHTS – PLEASE READ:

EXCLUSION OF LIABILITY – WAIVER OF RIGHT TO SUE – YOUR ASSUMPTION OF RISK – THESE CONDITIONS AFFECT YOUR LEGAL RIGHTS.

Vuly USA Operations Corp. (3666901) (“Vuly”), as supplier of trampolines and accessories (“Products”), sells all Products subject to the following conditions:

1. To the maximum extent permitted by the law, Vuly, its employees, directors and agents will not be liable to the customer, their dependents or legal representatives for damage to property, personal injury or death suffered by the customer because the Product was not manufactured or supplied with due care and skill, the Product is not reasonably fit for its purpose or because of negligence, breach of contract, breach of statute or breach of statutory duty by Vuly.
2. Vuly, its employees, directors and agents are not liable to the customer, their dependents or legal representatives for personal injury or death suffered by the customer because the Product was not:
 - a. installed in accordance with the Vuly instruction manual. It is the customer’s responsibility to check all boxes to confirm that all components are included and in the correct condition before assembly.
 - b. installed with due care and skill, by a the customer or a third party assembly service; and
 - c. in the same condition as when the Product was supplied, due to wear and tear – including, but not limited to, weather damage, deterioration of the net, spring stretch, UV deterioration or rust.
3. The customer acknowledges that using the Product can be dangerous, with inherent risks and hazards. As a consequence, personal injury or death may occur. The customer assumes and accepts all such risks, and hereby – to the full extent permitted by law – waives the right of action against, and fully releases Vuly for, loss, damages, personal injury or death in any way caused by, or relating to, the customer’s participation in such activities.

This includes – without limitation – liability for any negligent or tortuous acts or omission, breach of duty, breach of contract or breach of statutory duty on the part of Vuly, its office bearers, directors, employees or agents.



**ADULT SUPERVISION IS REQUIRED AT ALL TIMES WHILST EQUIPMENT IS IN USE.
VULY CARES ABOUT SAFETY.**



See [VulyPlay.us/Terms](https://www.vulyplay.us/terms) for the most recent Vuly warranty policies, terms and conditions.

SAFETY, CARE AND MAINTENANCE

The Vuly Tent Wall will not provide safety from harsh weather, nor will it extend the life of the trampoline. It is designed only to offer shelter from sunlight and for recreational use (e.g. for nighttime camping).

Weather Care




Remove your Tent Wall when not in use for extended periods. Do not leave it attached to your trampoline in heavy rain, wind gusts, storm and snow conditions. This will preserve the life of the Tent Wall and postpone fading, sagging or tearing.

ASSEMBLY INSTRUCTIONS

These instructions are compatible with Tent Wall for all Vuly trampoline models.

STEP | 1


Take your Tent Wall, and align it beside the entrance on the Safety Net. Laying the rest of the Tent Wall around your trampoline, inside the Net Poles.

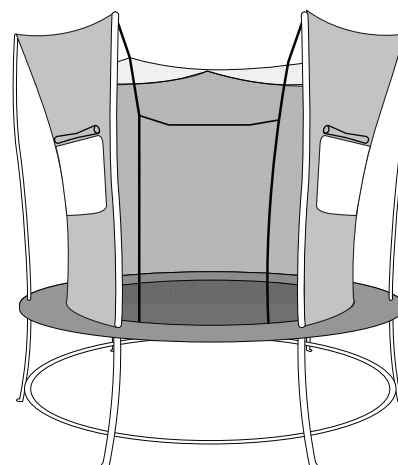

STEP | 2


Find the top corner of the Tent Wall to the right of the door, and feed its plastic connector through the strap at the top of your trampoline's Net Pole.

Make your way around the trampoline, feeding connectors through net straps, until the Tent Wall is hanging from the top of your trampoline's Safety Net.

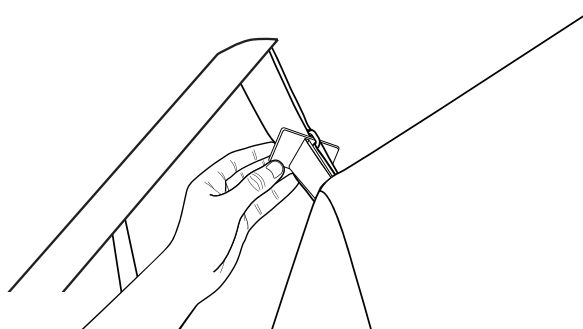


STEP | 3

Connect the two ends of the Tent Wall together at the entry with the two long elastics.

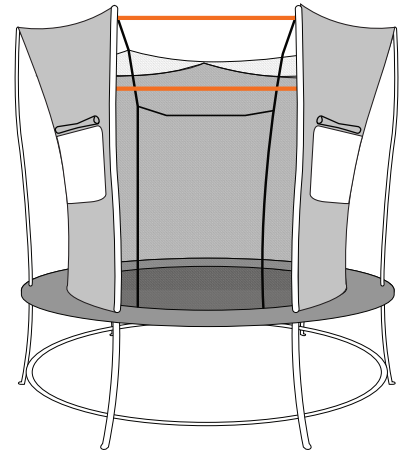


STEP | 4

- A. Connect the clips securely at the bottom of the door around three springs (or Leaf Springs).
- B. Connect the remaining clips around two springs (or Leaf Springs) each.
- C. Connect each Velcro strip around their corresponding springs (or Leaf Springs).

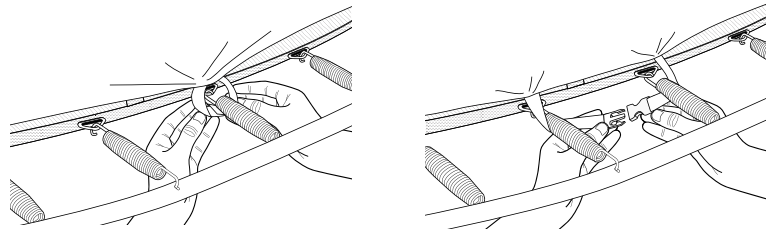


Tip: To open the Tent windows:

- A. Unstick the Velcro from the clips on the window corners.
- B. Squeeze the rope lock on the bottom left of the window, and pull the rope (Thunder Pro only).
- C. Roll the material, and stick it to the Velcro.
- D. Repeat for each window.

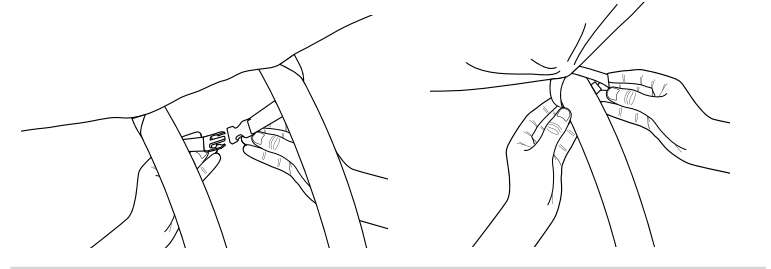

STEP | 5

Stick the Tent Door onto the Velcro pieces at the trampoline entry. Remove or roll up as desired.

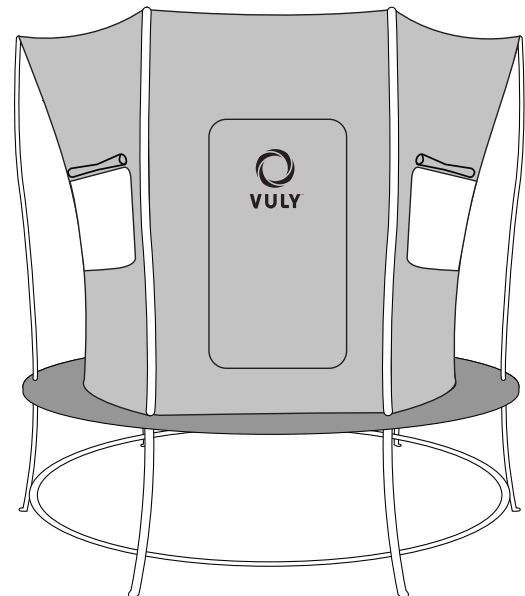

CONGRATULATIONS!

You have attached the Tent Wall to your Vuly Trampoline.