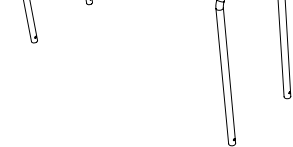


ENSURE THAT AS YOU FOLLOW THESE INSTRUCTIONS, YOU FIRMLY SECURE ALL PARTS WITH NUTS AND BOLTS.

## STEP | 1

- 
- Insert Bushings into the four holes in the Top Connector.
  - Insert a Top Bar (Male) and Top Bar (Female) into the Bushings on one side of the Top Connector.

Repeat for the other side, but swap the positioning of the Male and Female Top Bars.

## STEP | 2

Position a Top Bracket on top of your Swing Rail, and the Top Connector underneath.

Secure the parts together with Hanging Bolts.


## WARNING:

**YOU MUST USE A 17 MM SPANNER**  
(NOT SUPPLIED) TO TIGHTEN THE HANGING BOLTS.


You must ensure that the Top Bracket is tightened evenly, or the bolt threading may strip – causing the swing to weaken and become unsafe.

## STEP | 3

- Insert Bushings into the four holes in the Base Rail.
- Insert Bottom Bars (Male) onto one side and Bottom Bars (Female) into the other.

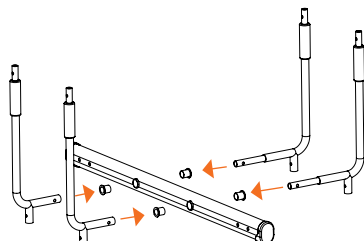

## STEP | 4

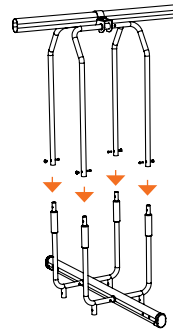

### ▶ VULY MINI:


Insert the ends of the Bottom Bars into the Top Bars.

Secure the parts with Frame Bolts.


### ▶ VULY MAX:

Insert the small end of the Max Tubes into the ends of the Top Bars, and the Bottom Bars into the large ends of the Max Tubes.

Secure the parts with Frame Bolts.

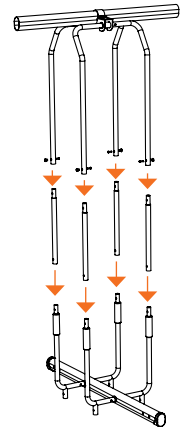

## STEP | 5

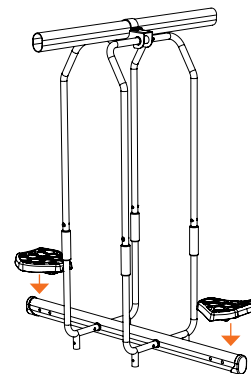


Attach a Seat to each end of the Base Rail.

## STEP | 6

Insert a Foot into the end of each Bottom Bar.

Ensure that those for the Left and Right are on the appropriate side.

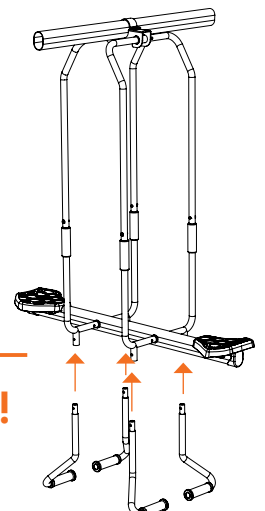

## CONGRATULATIONS!

You have attached the Seesaw Swing to your Swing Set.

## **ATTENTION!**

Safety information, installation and use instructions.

Read prior to installing and using the swings.

See **VulyPlay.com/support** for any updates to these instructions.

## **WARNING!**

- Minimum user age – 6 years. Only for domestic and outdoor use.
- Maximum user weight per swing station – 80 kg (175 lb) [65 kg (132 lb) on Spin Swing].
- Maximum combined user weight per swing set section – 150 kg (330 lb).
- Adult assembly required. Adult supervision required at all times.
- Ensure that the Swing Set is secured with anchors or bolts before use.

## **Vuly Play**

95 Ingleston Rd, Brisbane QLD 4154

AU: 1300 667 514

US: 1-800-467-1421

[www.vulyplay.com](http://www.vulyplay.com)

