




## Parts List

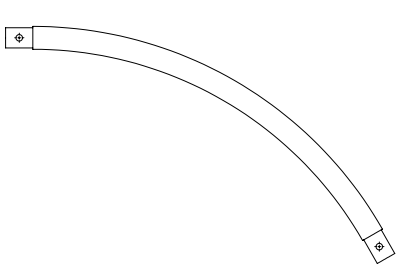


4x Upper Tube

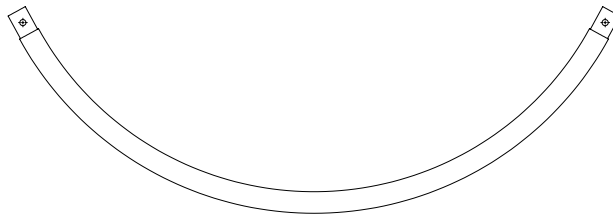


2x Lower Tube

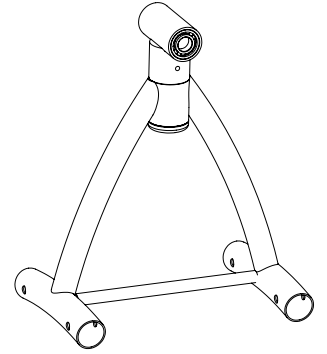


1x Hanging Joiner

 


2x Side Tube

 


2x Side Joiner (left)

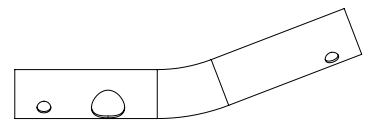


2x Side Joiner (right)

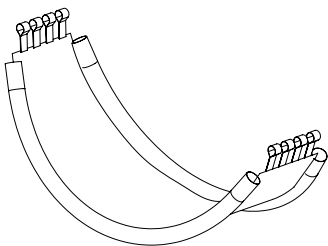


1x Base Mat

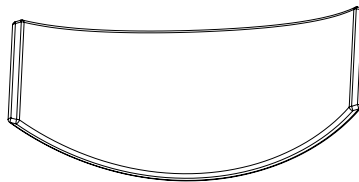

1x Padding

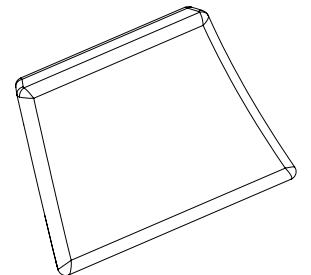

2x Pillow

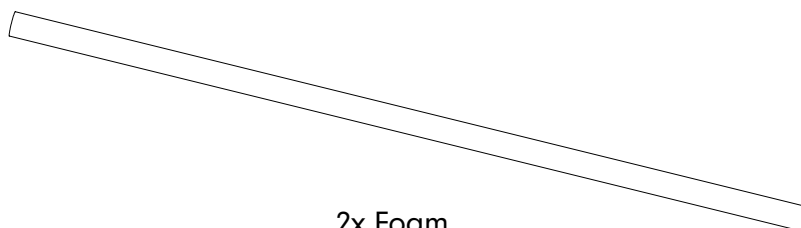

2x Foam


# Ring Swing

# MANUAL

## STEP | 1

Replace a Swing Rail on your swing set with the included Ring Rail.

Ensure that the prongs are closer to the centre than the end of the swing set.

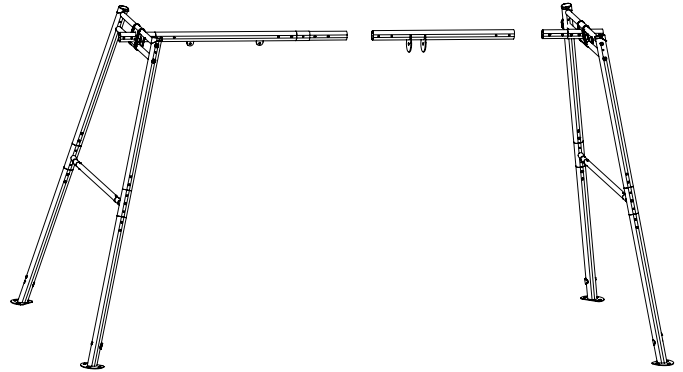


## STEP | 2

A. Insert Side Joiners (both left and right) into the corresponding ends of a Lower Tube.


Ensure that the large hole on the Side Joiners is at the top.

B. Repeat for the other Lower Tube.

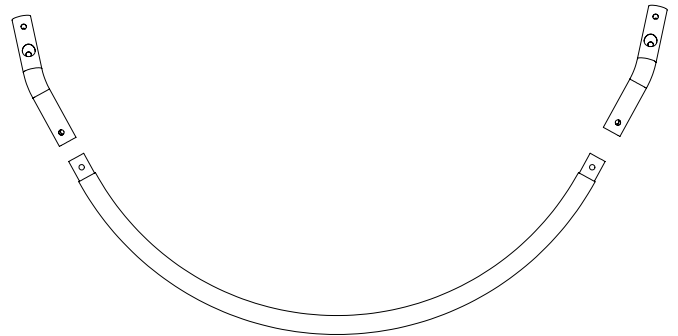

## STEP | 3

Slide Foams over both Lower Tubes.

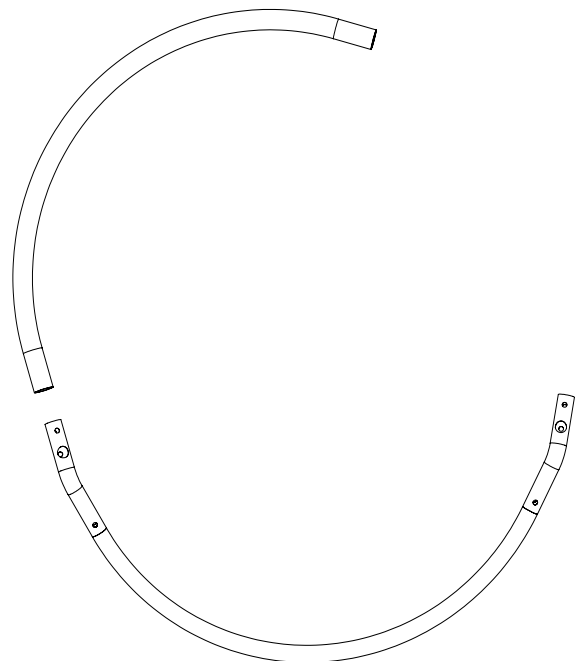


# Ring Swing

# MANUAL


## STEP | 4

Insert a completed Lower Tube into the sleeves on both sides of the Base Mat.

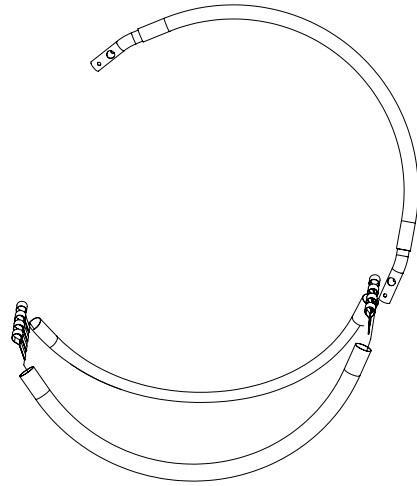


## STEP | 5

Insert Side Tubes through the loops between the Left and Right Side Joiners on both sides.

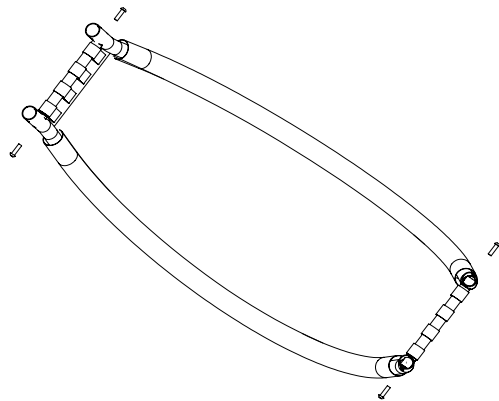


## STEP | 6

Attach the Hanging Joiner to the Ring Rail on your swing set, and secure with the large nut and bolt.

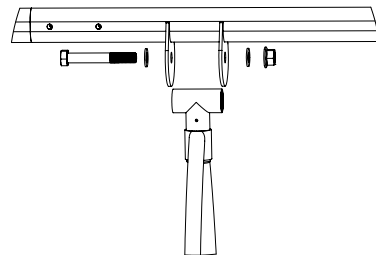


## STEP | 7

Insert the Upper Tubes into all four ends of the Hanging Joiner.

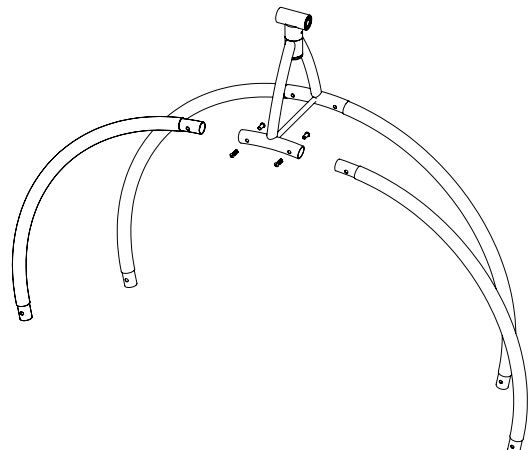


## STEP | 8

Insert the Side Joiners on the completed lower half of the Ring Swing into the Upper Tubes.

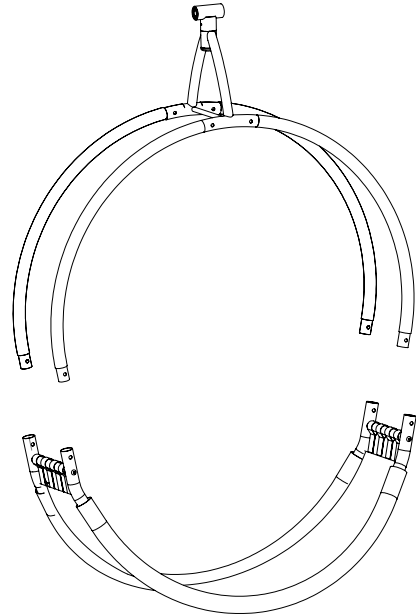

## STEP | 9

Place the Padding in the centre of the Base Mat and the Pillows at the ends. Secure with Velcro.

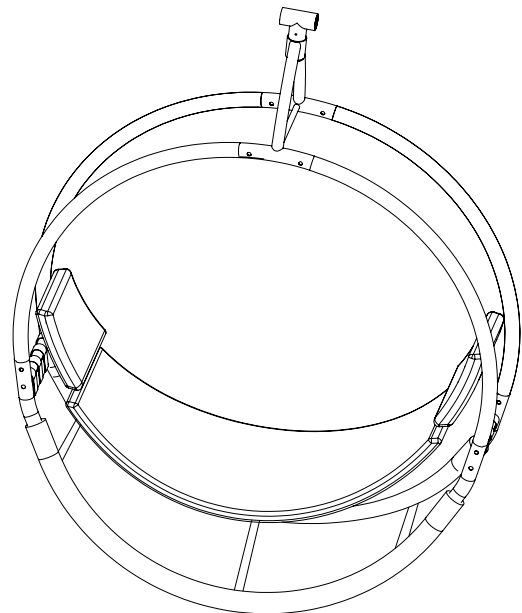

# CONGRATULATIONS!

You have attached the Ring Swing to your Vuly swing set.