



## STEP | 1

- A.** Insert the curved Frame Tubes through the holes at the end of the Base Material.

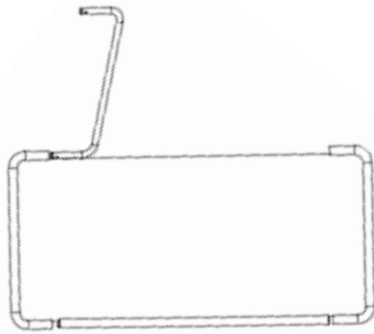


- B.** Slide the straight Frame Tubes through the holes along the side of the Base Material.

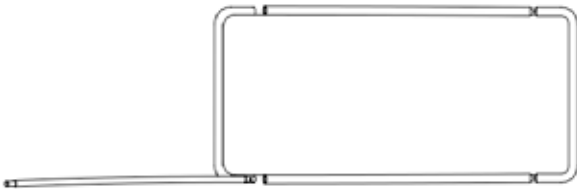

## STEP | 2

Connect the Frame Tubes together.

Ensure that the bolt holes in all parts line up.

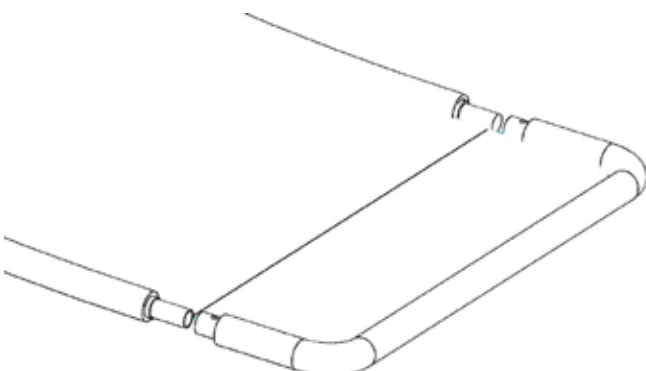

## STEP | 3

Insert the bolts at the end of the Ropes into the holes to secure the Frame Tubes together.



Make sure that you insert the locking nut first, then attach the cap nut.



## STEP | 4

### VULY MINI:

- A.** Remove the first set of carabiners on both sides of the Swing.
- B.** Unlock the carabiners on your Swing, and hook them into the lugs on the Swing Rail.

Ensure that both carabiners are facing the same direction and have been firmly tightened.

### VULY MAX:

Unlock the carabiners on your Swing, and hook them into the lugs on the Swing Rail.

Ensure that both carabiners are facing the same direction and have been firmly tightened.

## CONGRATULATIONS!

You have attached the Bed Swing  
to your Swing Set.