



# MANUAL



## Attention!

SAFETY INFORMATION, INSTALLATION, CARE AND MAINTENANCE  
INSTRUCTIONS. READ PRIOR TO ASSEMBLING AND USING THE PRODUCT.

Vuly cares about safety. Adult supervision is required at all times whilst equipment is in use.

Visit [www.vulyplay.com/install](http://www.vulyplay.com/install)  
for step by step video instructions,  
or scan this QR code:





# Contents

---

Read and follow all instructions in this manual before using your trampoline, and do not use the trampoline in any way that is not described in this manual.

Responsibility rests with the owner and supervisors of the trampoline to make sure that all users are aware of the practices specified in this manual.

1.0. Disclaimer .....	4
2.0. Care and Maintenance .....	5
2.1. General care .....	5
2.2. Rust and corrosion .....	5
2.3. Textile deterioration .....	5
2.4. Weather care .....	5
2.5. Relocation .....	5
2.6. Inspection checklist .....	6
3.0. Usage and Behaviour .....	6
3.1. Safe use information .....	6
3.2. Safe use instructions .....	6
3.3. Basic trampolining instructions .....	7
4.0. Installation .....	9
4.1. Location planning .....	9
4.2. Parts checklist .....	9
4.3. Assembly instructions .....	10
5.0. Product registration .....	16
6.0. Half-price replacement parts .....	16
7.0. Warranty .....	16
7.1. Warranty periods .....	16
7.2. Inclusions .....	16
7.3. Exclusions .....	16
7.4. Warranty Claims .....	17
7.5. Australian Consumer Law .....	18
8.0. Missing parts .....	18

# 1.0. Disclaimer

---

The following Conditions of Sale will apply to, and bind the purchaser of, any Vuly Trampolines Pty. Ltd. ABN: 91 160 793 706 product.

## NOTICE TO USER:

Please read this agreement carefully before purchase or assembly. By purchasing, opening and assembling this product, you acknowledge that you have read this agreement, understand it and agree to be bound by its conditions. If you are making a purchase on behalf of another person, you agree that you are making the purchase as their agent.

## LEGAL RIGHTS – PLEASE READ:

EXCLUSION OF LIABILITY – WAIVER OF RIGHT TO SUE – YOUR ASSUMPTION OF RISK – THESE CONDITIONS AFFECT YOUR LEGAL RIGHTS.

Vuly Trampolines Pty. Ltd. ABN: 91 160 793 706 ("Vuly"), as supplier of trampolines and accessories ("Products"), sells all Products subject to the following conditions:

1. To the maximum extent permitted by the law, Vuly, its employees, directors and agents will not be liable to the customer, their dependents or legal representatives for damage to property, personal injury or death suffered by the customer because the Product was not manufactured or supplied with due care and skill, the Product is not reasonably fit for its purpose or because of negligence, breach of contract, breach of statute or breach of statutory duty by Vuly.

2. Vuly, its employees, directors and agents are not liable to the customer, their dependents or legal representatives for personal injury or death suffered by the customer because the Product was not:

- a. installed in accordance with the Vuly instruction manual. It is the customer's responsibility to check all boxes to confirm that all components are included and in the correct condition before assembly.
  - b. installed with due care and skill, by a the customer or a third party assembly service; and
  - c. in the same condition as when the Product was supplied, due to wear and tear – including, but not limited to, weather damage, deterioration of the net, spring stretch, UV deterioration or rust.
3. The customer acknowledges that using the Product can be dangerous, with inherent risks and hazards. As a consequence, personal injury or death may occur. The customer assumes and accepts all such risks, and hereby – to the full extent permitted by law – waives the right of action against, and fully releases Vuly for, loss, damages, personal injury or death in any way caused by, or relating to, the customer's participation in such activities.

This includes – without limitation – liability for any negligent or tortious acts or omission, breach of duty, breach of contract or breach of statutory duty on the part of Vuly, its office bearers, directors, employees or agents.

---

## RISK WARNING:



The use of the Product involves a significant risk of participants suffering personal injury including the possibility of serious injuries, permanent disability or death. All participants who engage in activities with the Product do so at their own risk.



**ADULT SUPERVISION IS REQUIRED AT ALL TIMES WHILST EQUIPMENT IS IN USE.  
VULY CARES ABOUT SAFETY.**

## 2.0. Care and Maintenance

---

Improper maintenance or lack of care can lead to your trampoline deteriorating earlier than expected. Please follow these care instructions to ensure that your trampoline lasts for as long as possible.

Customers must not modify the original trampoline, unless carried out according to Vuly instructions

### 2.1. General care

- Retain this Manual.
- Inspect before and after each use. It is essential that you replace any worn, defective or missing parts immediately and only through Vuly.
  - See the 2.6 Inspection checklist.
- Ensure that the Safety Net (and Safety Padding, if applicable) is always correctly attached and in good condition.
  - Replace the Safety Net every 1 year.
- Keep away objects that could damage textile components.
- Ensure that moving steel components remain well lubricated.
- Use only Vuly-made accessories.
- Use only parts that are recommended by Vuly.

### 2.2. Rust and corrosion

- Be aware of areas that are particularly prone to rusting:
  - Places where water is easily trapped.
  - Hollow sections of steel (which can appear in good condition on the outside, while hiding rust on the inside).
  - Sections where steel components join together.
- Inspect the inside of all Frame Poles and Net Poles every 6 months – as well as after rain – and remove any water from the inside surfaces.
- Check Frame Pole and Net Pole connection areas for rust.
- Use general-purpose grease on steel connection areas.
- Avoid cleaning steel components excessively; it may reduce the effectiveness of our protective coatings.

### 2.3. Textile deterioration

- Clean your Jump Mat with a soft sponge only to avoid prematurely wearing the textiles.
- Avoid using powerful soaps or detergents; they can damage the textiles.
- Wipe dry with an absorbent cloth any water left after rain, cleaning or use of the Vuly Mister accessory. The Jump Mat may discolour or form spots, if left to dry in the sun.
- Inspect the inside of your Safety Padding (if applicable) regularly, and remove any water through the drainage holes.

- Remove textile parts, and store them – in their original packaging – in a cool, dry and dark place when the trampoline will be unused for over 1 month. Prolonged exposure to UV sunlight can shorten the lifespan of the Safety Net.

### 2.4. Weather care

Components of this trampoline are susceptible to deterioration from use and environmental conditions – such as sunlight, rain, salt and heat – to varying degrees.

If your trampoline will be unused for any extended period, disassemble it, return it to its original packaging and store it in a dry place.

 **RAIN:** Remove any fallen debris on your trampoline after rain and wipe off residual water with a dry cloth. Moisture left on the trampoline may contribute to the corrosion of steel components and weaken textiles.

 **WIND:** Disconnect the Safety Net from the Net Poles, and cover the Safety Net and Jump Mat with a storm cover.

 **COLD:** Disassemble your trampoline and store the Jump Mat and Safety Net indoors.

 **HEAT:** Move your trampoline to where it will receive the most shade during the brightest times of the day. Cover when not in use to minimise UV damage.

In certain countries during the winter period, the snow load and the very low temperature change can damage the trampoline. It is recommended to remove the snow and store the mat and the enclosure indoors; checking that the mat, padding and enclosure are without defects.

### 2.5. Relocation

- Move the trampoline with a minimum of 4 adults, to ensure that the lift is within heavy lifting regulations.
- Do not drag the trampoline. Parts may bend or warp if insufficiently lifted.
- Avoid tilting the trampoline or resting it on its side; the frame may bend under its own weight.
- Disassemble the trampoline, and return it to its original packaging, to transport it over long distances.

COMPONENTS WILL DETERIORATE OVER TIME.

**Note:** Sunlight, rain, snow and extreme temperatures reduce the strength of components over time.

Record your date of purchase here:

	/	/
---	---	---

## 2.6. Inspection checklist

Use this checklist to inspect your trampoline before each use. Replace any worn, defective, or missing parts to avoid potential hazards.

If you discover any safety issues, do not use the trampoline. Contact Vuly to order and replace any parts.

### Frame

- Bends, cracks, twists or breaks
- Rust spots
- Sharp protrusions

### Safety Padding

- Missing, improperly positioned or insecurely attached Safety Padding
- Punctures, frays, tears or holes
- Deterioration of, or damage to, the stitching or fabric

### Springs

- Missing, broken or damaged springs

### Jump Mat

- Punctures, frays, tears or holes
- Deterioration of, or damage to, the stitching or fabric
- Sagging fabric
- Sharp protrusions in the suspension system elements
- Rusting, damaged or bent mat connector steel
- Broken mat connector plastics

### Safety Net

- Missing, improperly positioned or insecurely attached Safety Net
- Punctures, frays, tears or holes
- Deterioration of, or damage to, the stitching or fabric of the enclosure barrier or connectors
- Sagging fabric
- Broken or damaged entry system

### Net Poles

- Missing, improperly positioned or insecurely attached:
  - A. Net Pole supports
  - B. Net Pole U-shackles
- Bends, cracks, twists or breaks
- Rust spots
- Sharp protrusions

## 3.0. Usage and Behaviour

Improper use of, or behaviour on, your trampoline can lead to serious injury. Please follow these usage and behaviour instructions to ensure safe play.

### 3.1. Safe use information

- Maximum user weight: 100 kg (M), 120 kg (L/XL)
- Domestic and outdoor use only.
- Suitable for ages 6 and over.

#### WARNING:

- Only one user. Collision hazard.
- Always close the net opening before jumping.

### 3.2. Safe use instructions

To reduce the risk of injury while using the trampoline, enforce the following:

- Ensure that the trampoline has been assembled by an adult, in accordance with the assembly instructions, and been checked over before first use.
- Do not bounce in strong wind conditions or inclement weather, and keep the trampoline secure.
- Ensure active and competent adult supervision at all times while children are using the trampoline. Children are often unable to identify hazards or properly assess risk.
- Avoid eating or drinking while bouncing.
- Empty pockets and hands before bouncing.
- Wear comfortable clothing that allows full and free movement.
  - Do not wear jewellery, drawstrings, cords, loops, buckles or anything that could entangle in trampoline components and become a strangulation hazard, a contact hazard or damage the trampoline.
- Remove shoes, as they may damage the bed and increase the risk of injury.
- Climb on and off the trampoline. Never jump or bounce off.
- Refrain from using the springs as 'hand grips' when getting onto or off the trampoline.
- Do not allow children, pets, toys or other play equipment underneath the trampoline. Make sure that the areas around, underneath and above the trampoline are clear.
- Learn fundamental bounces and body positions before trying more advanced manoeuvres.
- Demonstrate safe use for children before allowing them onto the trampoline.
  - To learn more advanced trampolining skills, contact a suitable gymnastics or trampoline club.

---

### 3.3. Basic trampolining instructions

This trampoline is a domestic trampoline, not a gymnastics trampoline. You will get the safest and best use from it by following these basic principles:

- Do not attempt or allow somersaults on the trampoline. Landing on your head or neck while doing somersaults can cause serious injury, paralysis or even death.
- Do not use the trampoline when wet. The Jump Mat will be slippery and make landing less secure.
- Do not allow users to intentionally bounce into or over the Safety Net, as this can unbalance the trampoline and continual impact may damage the enclosure. Always jump in the middle of the Jump Mat.
- Do not use the trampoline as a springboard to other objects. Use the trampoline only for trampoline-style bouncing.
- Focus your eyes on the edge of the trampoline. This will help control your bounce.
- Stop your bounce by flexing your knees as your feet come in contact with the trampoline bed. Learn this skill before you attempt any others.
- Avoid bouncing too high. Stay low until you can control your bounce and repeatedly land in the centre of the trampoline.
- Do not bounce immediately after a meal.
- Limit the time of continuous usage.




## 4.0. Installation


---

### 4.1. Location planning

- Do not bury the trampoline into the ground.
- Place the trampoline on a flat, level surface with impact attenuating properties – such as grass.
- Ensure that the trampoline is sufficiently stable, to prevent the trampoline from tipping over or blowing away. Sandbags or pegs may be suitable anchorage devices.
- Keep a minimum of 8 m overhead clearance, when measured from the bed height, to prevent users from inadvertently contacting overhead hazards – such as electric wires, tree limbs and clotheslines.
- Maintain a minimum clearance of 2 m on all sides of the trampoline. This area should not include concrete, bitumen, brick or other hard surfaces, as these can cause serious injuries if users fall off the trampoline.
- Do not locate the trampoline on top of other objects or store anything underneath the trampoline bed.
- Keep the area around and underneath the trampoline clear. Place the trampoline away from walls, structures, fences and other play areas.
- Place the trampoline in a well-lit area.

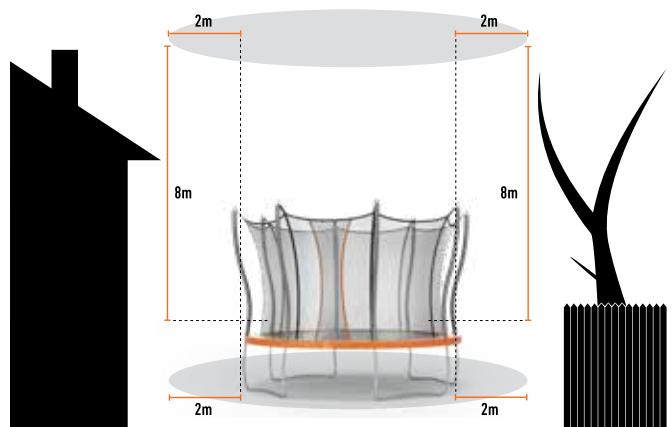

**Correct Installation**

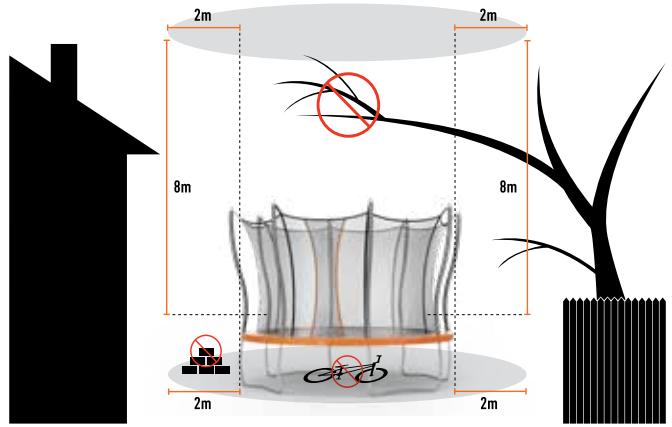


**Incorrect Installation**

## 4.2. Parts checklist

---

### VULY Flare

Check that your trampoline bundle contains the all of following parts:

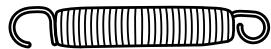


Springs

M	L	XL
56	70	84




Upper Net Poles

M	L	XL
8	10	12

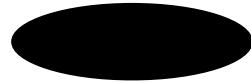

Jump Mat

M	L	XL
1	1	1

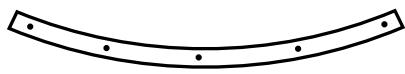

Curved Poles

M	L	XL
8	10	12



Lower Net Poles

M	L	XL
8	10	12




Safety Net

M	L	XL
1	1	1




W-Pole

M	L	XL
4	5	6

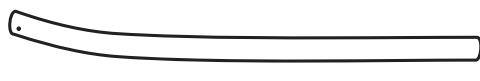

Straight Poles

M	L	XL
8	10	12

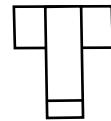

T-Joiner

M	L	XL
8	10	12



Safety Pad

M	L	XL
1	1	1



Spring tool

M	L	XL
1	1	1

## 4.3. Assembly instructions – Vuly Flare

### PRE-ASSEMBLY

- Find level ground, and make sure that there are no obstructions nearby.
- Check that you have all the parts required for assembly.

**REMEMBER: WEAR THE VULY GLOVES AT ALL TIMES WHEN INSTALLING YOUR TRAMPOLINE.**




## Frame

---

### STEP | 1

- A. Lay the curved poles, found in Box B, in a circle as seen in the diagram, check that the springs holes on your curved poles are facing up.
- B. Lay your T-Joiners, found in Box D, between the Curved Poles as seen in the diagram.
- C. Attach your T-Joiners to the curved poles to create the circular frame. Be sure to check that the holes drilled on the circular part of the Joiner is facing towards the middle of the circle.

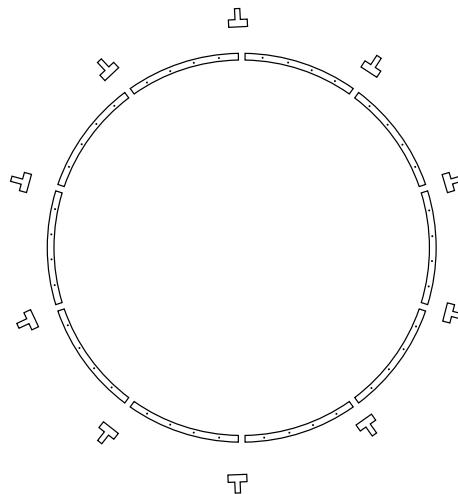


---

### STEP | 2

- A. Lay the Jump Mat (found in Box A) in the middle of the assembled frame and locate the Batch Tag, the Batch tag will be to the left of the entrance to the trampoline.
- B. Using the Spring Tool, connect a spring to the D-Shackle left of batch tag and then attach this to the left of the Joiner where you wish the entrance to be, do the same to the D-Shackle to the right of the Batch tag and then continue to attach all the springs to the left and right of the Joiners.


(This will keep the frame locked together due to the tension from the jump mat)

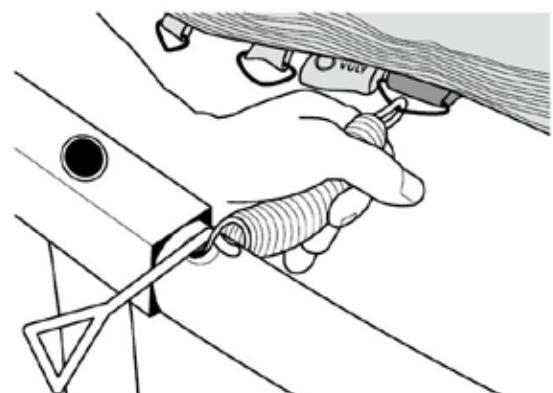

---

### STEP | 3

Lay out the Straight Poles, found in Box B, and your W-Poles, found in Box A as seen in the diagram.

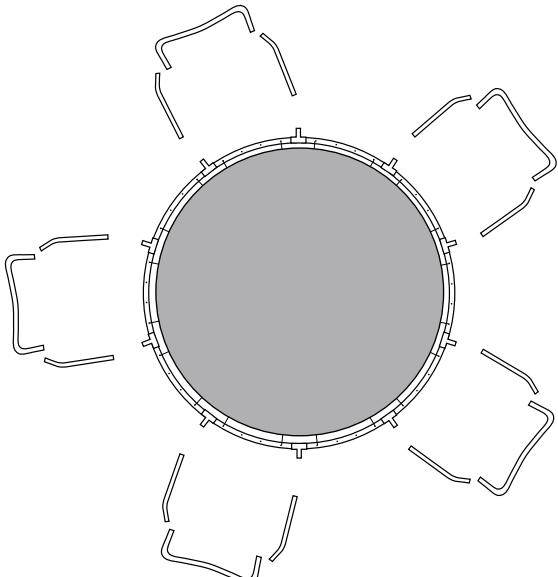


## Jump Mat and Springs

---

### STEP | 4


Attach the Straight Poles into the T-Joiners and click the Push-Button into the hole in the T-Joiner as seen in the diagram.

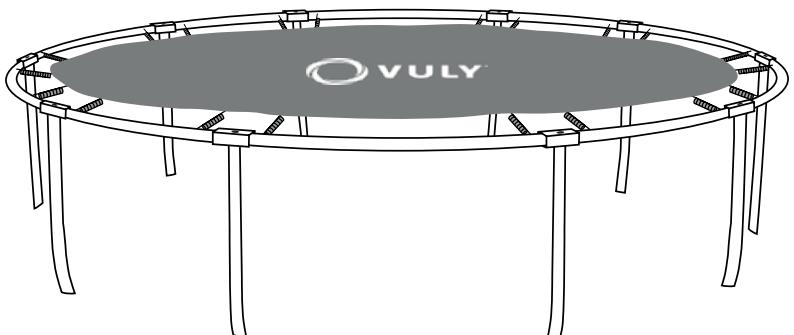

---

### STEP | 5

Attach the W-Poles into the Straight Poles and click the Push-Buttons into the holes at the bottom of your Curved Poles to complete your Flare frame.

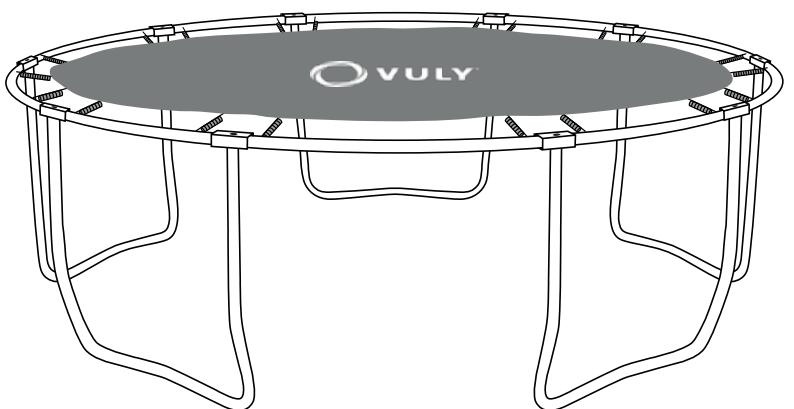


## Safety Net

---


### STEP | 6

- A. Layout the Safety Net (found in Box C) on top of the jump mat.
- B. Locate the Batch Tag and rotate your net so that this lines up with the Batch Tag on your Jump Mat.

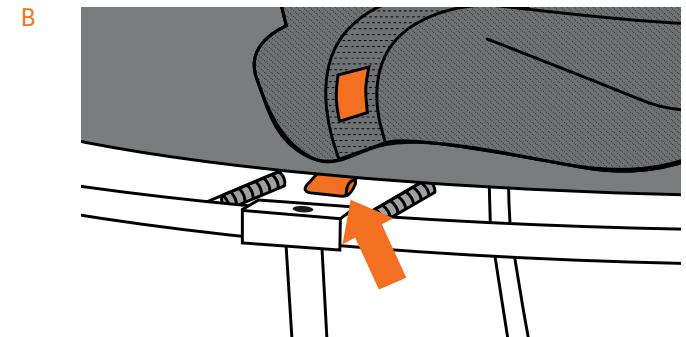

## STEP | 7

- A. Remove the Springs on either side of the Joiner where your Batch Tags are.
- B. Attach these D-Shackles through the eyelets of the net on both sides of the Batch Tag.
- C. Re-attach the Springs.
- D. Repeat for each Spring and D-shackle to the left and right of every T-Joiner.

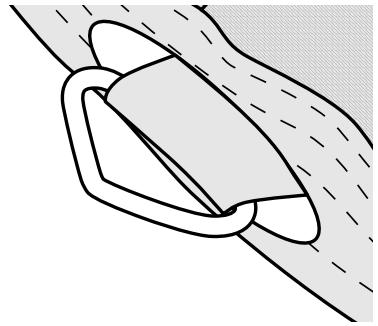


## STEP | 8

Walk around your trampoline and attach all of your D-Shackles through the eyelets in the Safety net.

## STEP | 9

- A. Walk around the trampoline and hang a spring off every D-Shackle on your Jump Mat.
- B. Using the Spring Tool, attach one spring to each Curved Pole and continue to go around the trampoline attaching one Spring per section until all of your springs are attached, it is important to keep the tension of your Jump Mat even during this stage.
- C. Ensure that the D-shackles remain slipped through the net connector holes as you complete this step.

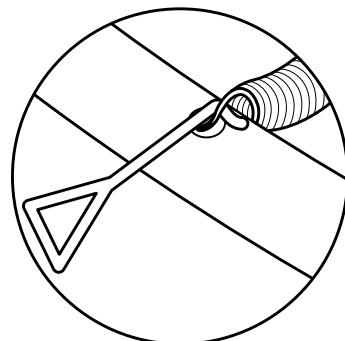


## Safety Padding

---

### STEP | 10

Place the Safety Padding (found in Box A) over the trampoline frame and line this up so that the Vuly logo is in line with the entrance in the netting and the holes in your T-Joiners are visible through the openings in the Safety Padding.

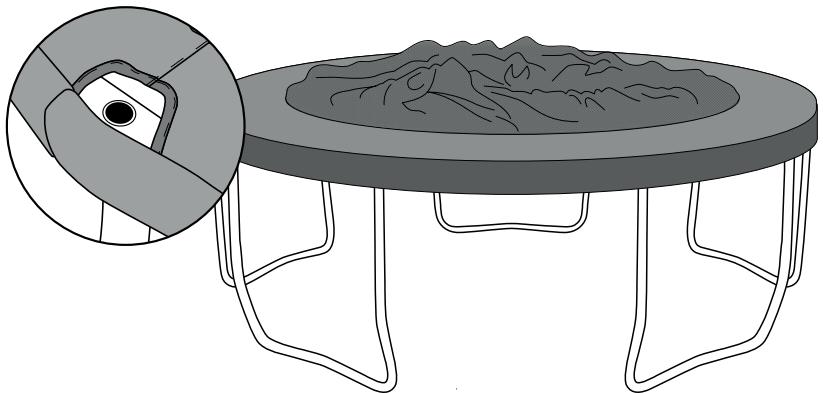


---

### STEP | 11

- A. Lift up the Safety Padding, and completely remove the Spring to the left of any T-Joiner.
- B. Feed the Spring through the loop on the Safety Padding, before attaching it to the Jump Mat and Curved Pole.
- C. Repeat for each Spring and loop in the Safety Padding to the left of every T-Joiner.

**Remember:** Ensure that the Safety Padding is correctly attached and secured. Properly installed Safety Padding is crucial to protect against injuries.

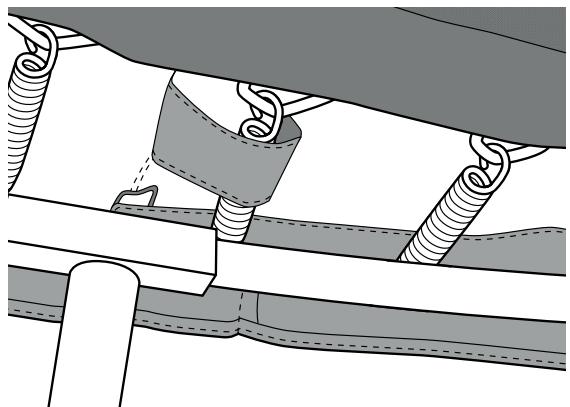



---

## Net Poles

---


### STEP | 12

- A. Connect your Upper Net Poles (found in Box D) and Lower Net Poles (found in Box C) together,
- B. The Lower Net Poles can be identified by the heart shaped bottom and the Upper Net Poles have a push button and narrowed bottom to attach into the Lower Net Poles.
- C. Rest the completed Net Poles against the frame at each T-Joiner.

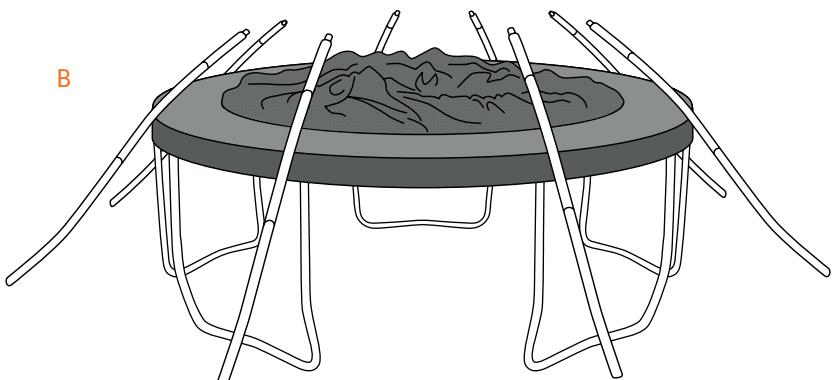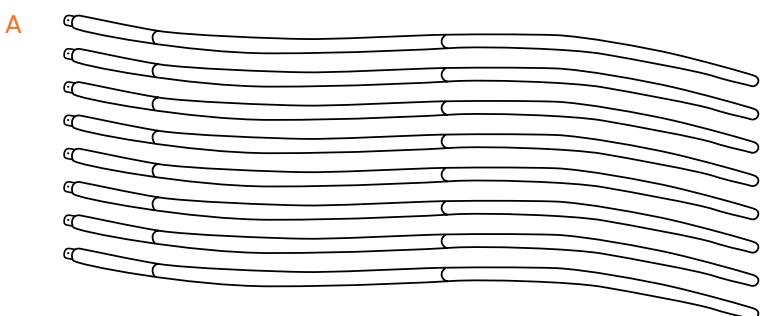




## STEP | 13

- A. Choose a net pole and find the corresponding strap on the net, at the very top of this strap there will be a metal U-shaped hook, attach this into the lower holes at the top of your Upper Net Pole as seen in figure B and lay the pole back down against the frame.
- B. Repeat this for all of the Net Poles until all of the Net Straps are connected to the poles.

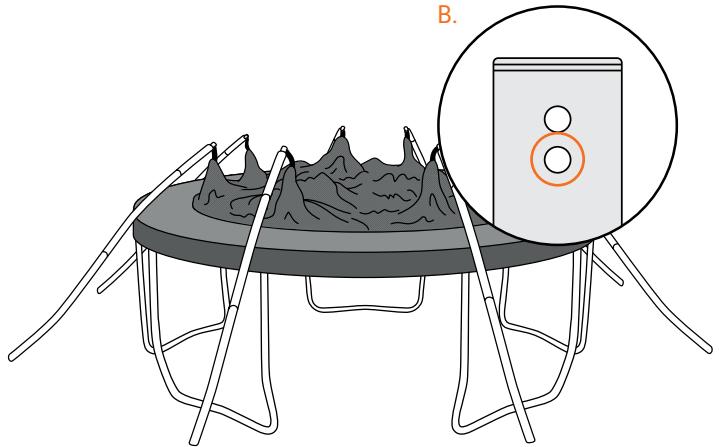

## STEP | 14

- A. Pick a net pole and lift this up to attach into the T-Joiner, be sure to check your net strap is not twisted and the heart shape of the lower net pole lines up with the T-Joiner.
- B. Insert it into the T-Joiner, through the holes in the Safety Padding. Ensure that there is no safety padding in the way when completing this step.
- C. Pull the Net Pole away from the trampoline slightly while pushing down until this slots fully into place - the groove on the lower net pole will not be visible once this is inserted fully.
- D. Repeat for each Net Pole until you have completely erected the Safety Net.
- E. Ensure the seam in your netting runs parallel with the Net Pole.

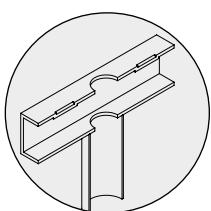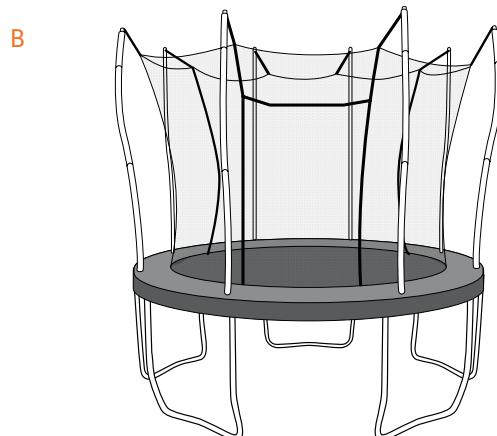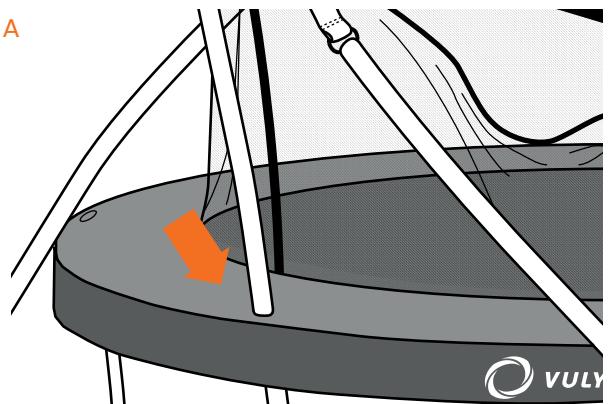

**Remember:** Ensure that the Net Poles have been secured. Check there is no groove visible on the Lower Net Poles (they are fully inserted)



**WARNING:** Make sure that all push buttons are locked and secured before using your trampoline.  
**Bouncing on a trampoline with push buttons that are not locked will cause damage and injury.**



# CONGRATULATIONS!

You have assembled your Flare trampoline.

## 5.0. Product registration

To access the Half-Price Parts for Life programme or to lodge a Warranty Claim, customers must ensure that their product is registered with Vuly.

Customers who purchase directly from Vuly (through VulyPlay.com, at the Vuly Showroom or over the phone) automatically have their product registered.

Customers who purchase through an Authorised Reseller must register their product by visiting **VulyPlay.com/Support** and completing the form with a proof of purchase.

## 6.0. Half-price replacement parts



Vuly offers half-price replacement parts to all customers for the lifetime of their trampoline purchase through the Half-Price Parts for Life programme.

This programme is subject to change at any time, and it is only available to customers who have purchased either through an Authorised Reseller or directly through Vuly.

Half-Price Parts for Life is only available to customers who wish to replace parts that are core components of their trampoline. For Flare, these parts include:

- Springs,
- Safety Padding,
- Jump Mat,
- Safety Net (and components thereof),
- Net Poles,
- Frame Poles,
- T-Joiners.

The programme does not extend to accessories or to Shade Cover / Tent components.

## 7.0. Warranty

All Vuly products are sold with a manufacturing warranty, which assures that the item is free of defects in workmanship and materials ("warranty").

### 7.1. Warranty periods

Warranty periods do not reset for any reason, unless the customer purchases a new product. In this case, that particular item will be covered by its own warranty period. It does not affect – nor will it increase – warranty periods for other purchased items.

Warranty periods always commence from the date of item delivery, is for use under normal conditions and applies for:

#### Flare

- 36 months [3 years] to the Frame Poles, T-Joiners, Springs and Jump Mat (excluding the print).
- 12 months [1 year] to all other parts of a purchased trampoline – e.g. Safety Padding, Safety Net and Net Poles.

#### Accessories

- 12 months [1 year] to purchased accessories – e.g. Mister, Deck – not received during a promotional period.
- 3 months to any items received at no cost as part of a promotion – e.g. 'Free Shade Cover'.

The customer may extend the standard 12-month [1 year] warranty to 36 months [3 years], if they purchase an extended warranty within 7 days of their delivery date.

### 7.2. Inclusions

This warranty covers manufacturing faults and defects only.

If a product is damaged or rendered unsafe as a result of a departure from its design specifications during production, this constitutes a manufacturing fault or defect.

This may occur if – for example – use of incorrect textiles during manufacturing causes a Safety Net to disintegrate, or if improper welding produces an unstable Frame.

### 7.3. Exclusions

#### 7.3.1. Damage through wear and tear

This warranty does not extend to normal wear and tear of the product. This may include, but is not limited to:

- Rusting of steel components,
- UV deterioration of textile components,
- Stretching of springs.

As outdoor products that are actively used, trampolines and their accessories will experience wear and tear over time.

### **7.3.2. Damage through weather conditions**

Damage to the product that results from weather events – such as rain or wind – are not covered under the warranty. Vuly suggests that you contact your home and contents insurer if your trampoline is damaged by such events.

### **7.3.3. Damage through improper installation**

This warranty does not extend to any failure of the product caused by installation not in accordance with the Vuly Manual. Customers must assemble their Vuly product by following carefully the Installation section of their Vuly Manual.

Furthermore, the warranty does not cover installation provided by a third-party assembly service. It is the customer's responsibility to check all boxes and confirm that all components are included in the correct condition before installing.

### **7.3.4. Damage through insufficient care or maintenance**

This warranty does not extend to accelerated decay of the product caused by poor care or maintenance. It is essential that customers regularly check, and follow the advice of, the Care and Maintenance section of their Vuly Manual to ensure that their product lasts as long as possible.

### **7.3.5. Damage through inappropriate use**

This warranty will be void if the product is used for any other activity besides those for which it was intended. Vuly products constitute recreational trampolines and accessories for such trampolines. They are not intended for use as professional, gymnastics trampolines, springboards, etc.

Any evidence that inappropriate actions have led to product failure will not be covered by the warranty. Similarly, replacement parts or repairs needed to mend such damage will not be covered under the warranty.

### **7.3.6. Damage through salt water proximity**

This warranty (on steel components, specifically) will be reduced by 50% where the Vuly product is assembled within 1.6 km of a salt water environment or where it is subject to ocean spray.

### **7.3.7. Personal Injury**

The warranty does not cover personal injury or losses due to any of the above: wear and tear, weather conditions, inappropriate installation, insufficient care or maintenance or inappropriate use, nor does it cover damage due to negligence or accidents.

## **7.4. Warranty Claims**

If a customer believes that a Vuly product is faulty or defective, they must discontinue use and submit a Warranty Claim.

A customer must not attempt to use a product if any part is faulty or defective, as it may be dangerous. Any damage that the user causes as a result of using faulty or defective products will lead to voiding of the warranty.

### **7.4.1. Making a Warranty Claim**

To fulfil a warranty claim, a customer must submit an online Warranty Claim at **VulyPlay.com/Support**.

Submitting the online Warranty Claim form requires the customer to provide:

- Details of their purchase – including date,
- Batch number,
- Clear photographic evidence of the manufacturing fault or defect.

If the customer does not provide all details that the form requires, their Warranty Claim will not be assessed.

Vuly may take up to 7 days to process Warranty Claims upon a completed submission. It may take a further 7 days for replacement parts to reach the customer.

### **7.4.2. Successful Warranty Claims**

If Vuly accepts a customer's Warranty Claim, Vuly will replace the faulty or defective parts, not offer refunds.

*Successful Warranty Claims lodged within 60 days of the delivery date:*

Vuly will replace the damaged parts free of charge. Vuly will also cover any costs associated with shipping the replacement part.

*Successful Warranty Claims lodged after 60 days of the delivery date:*

Vuly will replace the damaged parts free of charge. The customer must cover any costs associated with shipping the replacement part.

### **7.4.3. Walk-in Warranty Claims**

If a customer wishes to make a Warranty Claim while on the Vuly premises, they must first submit an online Warranty Claim at **VulyPlay.com/Support** – providing all required details.

### **7.4.4. Refunds**

In all instances of successful warranty claims, Vuly offers replacements parts only. Vuly provides refunds only at their discretion. Any refunds granted to the customer exclude third-party fees, such as assembly services and credit card surcharges.

#### 7.4.5 Claiming on non-Vuly products

Products sold alongside Vuly that are not Vuly-branded are subject to the warranties provided by the companies that supply them. The customer must contact these external companies to make a warranty claim; Vuly will not assess claims made against non-Vuly products.

#### 7.5. Australian Consumer Law

Our Goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the Goods repaired or replaced if the Goods fail to be of acceptable quality and the failure does not amount to a major failure.

### 8.0. Missing parts

If a customer believes that a Vuly product does not include all necessary parts, they must immediately lodge a Missing Parts Claim at **VulyPlay.com/Support**.

A customer must not attempt to use a product if any part is incomplete, as it may be dangerous. Any damage that the user causes as a result of using incomplete products will lead to voiding of the warranty.

Vuly trampolines are delivered to Vuly warehouses prepackaged; we are unable to check the boxes prior to delivery to ensure that they contain all the required parts. While the missing part rate during packing is very low, some parts may also fall out in transit due to small, unintentional tears in their boxes.





See [vulyplay.com/terms](https://vulyplay.com/terms) for the most recent Vuly  
warranty policies, terms and conditions.